



INSTALLATION INSTRUCTIONS

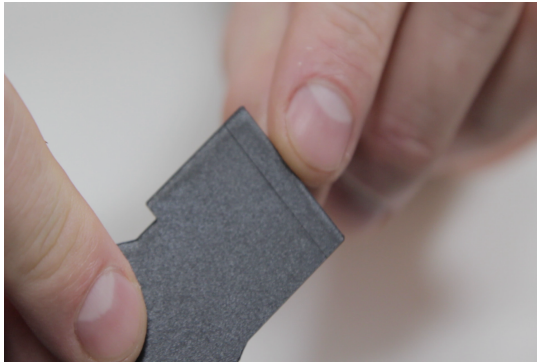

Step 1: Locate the scored line and bend down the back flap to a 90° angle.

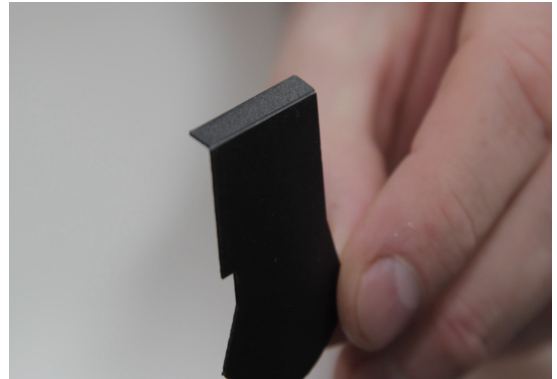

Step 2: The hood should look like this.



Step 2: Place the lens hood on top of your GoPro and align it with the left edge.



Step 3: Snap the GoPro into the Zenmuse tray.



Step 4: Place the retaining bar over the GoPro and lens hood. Install screws.

